

## MANUAL EXPOSURE:

### **M** mode

#### *'Hand Metering':*

- press the Select button & the Up/Down button to select a shutter speed
- select an Aperture

#### *Spotmetering* through the viewfinder:

- Aim at the desired tone/subject area
- Press the release ½ way, and at the same time press the Up/Down button to lock a displayed speed, or use the + - in viewfinder

## FIXING FOCUS:

### **P, A, or M** mode

#### To hold *auto focus*:

- Press Release ½ way
- Press MF button

#### To set to $\infty$ :

- Press and hold the MF button
- Infinity (999) is displayed and set

#### To set *distance*:

- Press and hold the MF button
- Press the Up/Down button to specify a new focus distance (in meters)

## To fix FOCUS & take an EXPOSURE from another part of the scene:

### **P, A or M** mode

- Press the Release ½ way, focusing on the main subject
- Press the MF button to lock that focus
- Aim at the desired tone/subject area
- Press Release ½ way to read the exposure, hold the release ½ way down
- Re- compose & shoot

## To hold an EXPOSURE & take FOCUS from another part of the scene:

### **M** mode

- Aim at the desired tone/subject area.
- Press Release ½ way, and at the same time, press the Up/Down button to lock a displayed exposure, or use the +- in the viewfinder.
- Aim at the main subject, focus, & hold the release ½ way down.
- Re-compose & shoot.

To select the *HYPERFOCAL DISTANCE*:  
(calculated to limit coc to 1/175)

- Hold MF button, when 999 appears press Up/Down button to select distance

*Nearest listed display distance in parenthesis*

Aperture	8	11	16	22
Set Focus to	6.19m ( <b>7</b> )	4.5m ( <b>5</b> )	3.1m ( <b>3.5</b> )	2.25 ( <b>2.6</b> )
dof from $\infty$ to >	3.1m	2.25m	1.55m	1.13m

**SILENT MODE:**

**P, A or M** mode

- Hold MF button & switch on. L is displayed with frame #.  
Use with fixed focus for max effect  
Switch off rewind (& resume later) to prevent noise

**EXPOSURE COMPENSATION: +- 2 stops in 1/3 increments**

**P or A** mode

- Press SELECT button
- Press Up/Down button

**FILM SPEED SETTING (manual):**

**A** mode

- Press SELECT button
- Press UP/Down button to set ASA